


XLN-290WB Multi-function Emergency Radio Manual

A2

I. COMPONENT NAMES

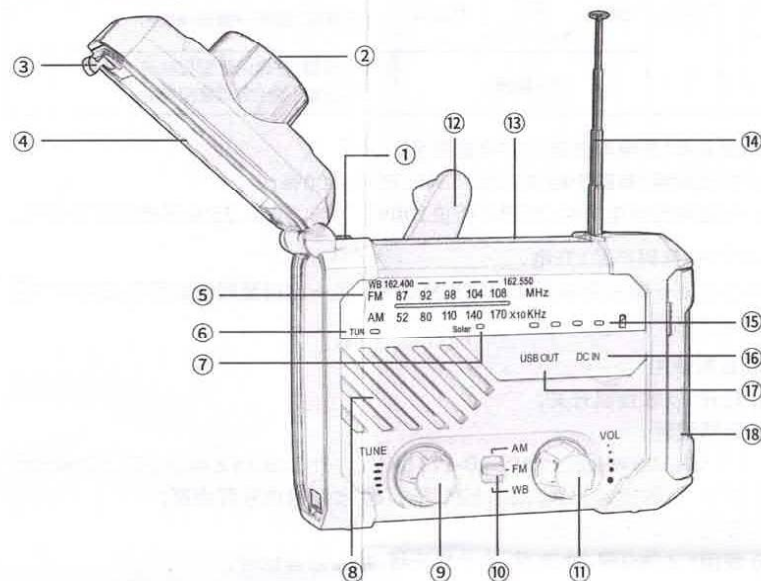

- | | | |
|-------------------------------|------------------------------|---------------------|
| ① Flashlight/desk lamp button | ⑦ Solar indicator | ⑬ Solar panel |
| ② Flashlight | ⑧ Speaker | ⑭ Antenna |
| ③ Desk lamp lock | ⑨ Channel button | ⑮ Battery indicator |
| ④ LED desk lamp | ⑩ AM/FM/WB switch | ⑯ Main input |
| ⑤ Frequency dial | ⑪ Volume button/Radio button | ⑰ USB output |
| ⑥ Radio signal light | ⑫ Crank handle | ⑱ Dry battery jar |

II. OPERATION INSTRUCTIONS

Charge the product before use.

1. Charging method (Turn off the radio during normal charging, if charge the product when the radio is working, it can only be ensure the power supply of the radio)

1) USB charging (adaptor)

Connect the charging cable (DC 5V 2A) to the product of Type-C port ⑰ and charge it directly, battery indicator light blinks during charging.

2) Dynamo charging

Open crank handle to charge the product with rotation (clockwise or counterclockwise). Remain 120-180 cycles/min, battery indicator light blinks during charging.

3) Solar charging

Put it in a sunny place for charging, and make the sun shine directly on the solar panel as much as possible. The higher the brightness of the solar indicator light ⑦, the higher the charging efficiency.

2. Keys description

Symbol	Name	Operation	Function	Functional description
	Switch	Flashlight	desk lamp closed	Turn on the flashlight
		LED desk lamp	desk lamp is on	Turn on the desk lamp
		Siren&Blink		long press: turn on Siren&Blink short press: turn off Siren&Blink

3. Check battery level (with charge and discharge indicators)

1) Charging: it has four modes 25%、50%、75%、100% to show battery level.

2) USB output discharge: it has four indicator light modes 100%、75%、50%、25% to show battery level, it blinks to show a low battery level.

4. Charge mobile phone or digital products

Connect the charging cable to the product of USB output port ⑰, the other end to mobile phone (digital product). Charging is in progress.

5. Radio usage steps

1) Turn on ⑪ radio button.

2) Select the channel

FM: 87-108MHz; AM: 520-1710KHz; WB: 162.400-162.550MHz;

3) Use knob ⑨ to select the channel, the radio signal light ⑥ is on when a station is captured.

4) Use knob ⑪ to adjust the volume.

5) Pull out the ⑭ radio antenna to enhance the radio signal when using FM / WB.

6. Dry battery usage steps

Put 3pcs 7# dry batteries in Dry battery jar to use when it out of power.

7. Desk lamp usage steps

Press ③ the table lamp lock to open the appropriate angle and turn on the desk lamp.

III. UNIT SPECIFICATION

1. Built-in battery: 3.7V 2000mAh 18650

2. Flashlight: 1PC LED (Weak light 0.5W, Strong light 1W)

Desk lamp: 14PCS LED (Weak light 0.5W, Strong light 1W)

3. Range of radio: FM: 87-108MHz; AM: 520-1710KHz; WB: 162.400-162.550MHz;

4. Solar panel specification: 5.5V 30mA

5. Lifespan of light sources: >10000H

6. Charging input: DC 5.0V 1.2A

7. Output power: DC 5.0V 1.0A

8. Unit weight: 275g

9. Unit size: 155*94*49mm

IV. PRECAUTIONS

1. The product is not suitable for children below 8 years old.

2. Avoid prolonged use of the device in extremely cold, hot, dusty and moist environment.

3. The indicator light blinks signifies low battery mode.

4. Clean the product cloth using dipped with some neutral detergent.